



Figure 22

Fence and Router Installation

19

I'll assume that you are going to use a fencing system, so the next step is to install it. If you intend on making dovetail joints for the drawers, might as well use the fencing system to make them.

I used an Inca Lead Screw (LS) system on the prototype as shown in Figure 24, although there are competitive models that will work as well. The Woodpecker's Inc top is pre-drilled for several Inca fencing system models, but if you are using a different fence or are making your own top, then simply drill the holes and mount the fencing system according to the manufacturer's instructions.

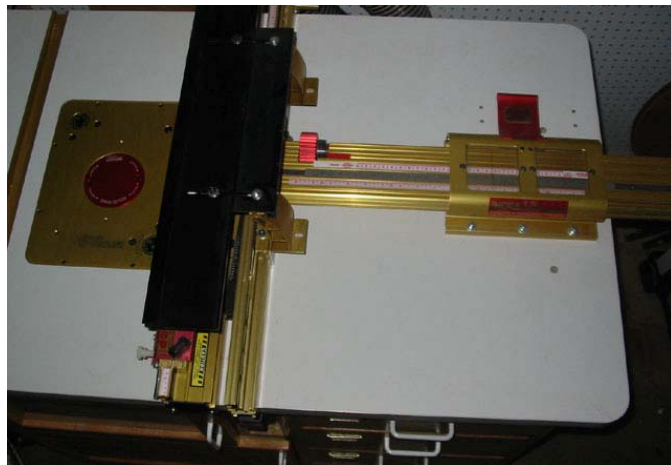


Figure 24

20

So now that you have your router and plate, attach the router according to the manufacturer's recommendation as shown in figure 25. Some routers have large handles, such as the Milwaukee 5625 that I chose. You may have to take the handles